


INSTRUCTION MANUAL

A) DISPLAYS AND BUTTONS

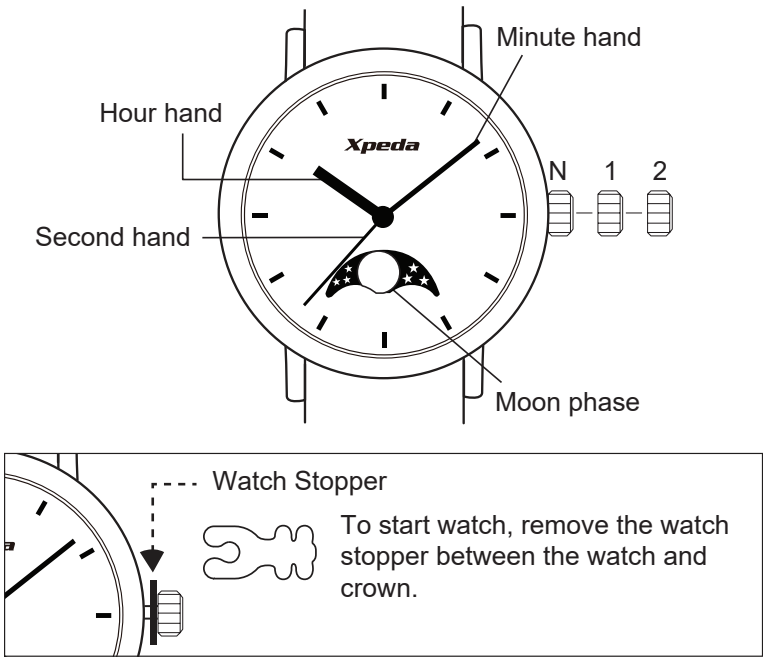

B) SETTING THE TIME

- 1. Pull the crown out to the 2nd position.
- 2. Turn the crown to set hour and minute hands.
- 3. When the crown is pushed back to the Normal position, second hand begins to run.

C) READING AND SETTING THE AGE OF THE MOON

The age of the moon is determined by the period between each new moon.
This period is approximately 29.5days.

** index of moon age

New moon Moon's age : 0 Spring tide	First quarter moon Moon's age : 7 Neap tide	Full moon Moon's age : 15 Spring tide	Last quarter moon Moon's age : 22 Neap tide

The moon dial represents the age of the moon : The actual shape of the moon during each phase is not represented. Use the moon dial indication as a guide to the age or phase of the moon.

Setting age of the moon


Check the newspaper or other source that lists the current age of the moon. Referring to above **index, set the moon dial to the age(0,7,15 or 22) closest to that index position. More accurate settings can be made at the time of the new moon (0) or full moon (15).

Setting procedure

- 1. Pull the crown out to the 1st position.
- 2. Turn the crown clockwise to set the moon dial.
- 3. After the moon dial has been set, push the crown back to Normal position.



操作指引

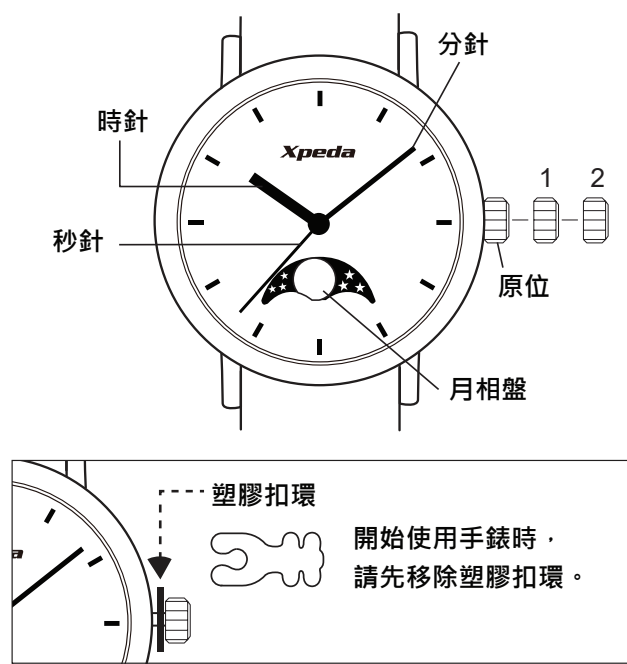

時間設置

1. 將表冠拉出至位置"2"。
2. 轉動表冠、將時針和分針設置到所要的時間。
3. 將表冠按回原位。

識別和設置月相

月相的顯示由每一個新月開始顯示其各階段，這過程約29.5天。

新月 月曆日期：0 大潮	第一個1/4月 月曆日期：7 小潮	滿月 月曆日期：15 大潮	最後一個1/4月 月曆日期：22 小潮

月相盤代表的月亮的各個狀態：實際上月亮在各個階段的實際形狀是不能描繪的，我們只是用月相盤作為一個大致的導向。

設置月相盤

從報紙和其它的資料上查找目前的農曆日期，參照上面的列表，設置離0，7，15，22較精確的月相位置。
最精確的位置就是在新月0和滿月15的時候設置。

設置方法

1. 將表冠拉出至位置"1"。
2. 順時針方向轉動表冠、將月相盤設置到所要位置。
3. 將表冠按回原位。

